

About NAUTILOCK

NAUTILOCK is a anti-theft lock designed to handle rough, aggressive marine environment, such as damp air, salt water corrosion and motor vibrations. NAUTILOCK works with diesel and with two- and four-stroke engines.

NAUTILOCK can be used on several other vehicles as, motorbikes, snow scooters or mopeds. The package contains two remote controllers and a card with a personal pin code on. Save this pin code in your wallet if an emergency launch is needed.

This system is fully automatic and is activated a minute after the engine is shut off. A blinking diode, mounted on the engine or the dashboard shows that the anti-theft alarm is activated. Activation is done with the remote control or an emergency launch.

Remote control

1. Deactivation button
 - For the anti-theft lock
2. Light
3. Anchor in/out
 - These buttons can be used for several purpose to steer for example the anchors or the lights on deck.

Maneuvering

- To deactivate the lock press on the deactivation button
 - The diode shines firmly and the lock is deactivated. Now turn on the engine, and the diodes light go out after 5 sec.
- Activate the lock
 - It is automatically switched on 1 minute after the engine is shut off.

NOTE! Deactivation is only possible when the ignition is off!



Emergency launch

If you don't have the remote control, it broken or missing you can emergency open the lock. Then you need the personal pin code.

Feed in the code using the:

1. Ignition key
2. Push switch if installed



Feed in the code by turning the ignition key on/off in periods with 1 second between each number.

1234

Let's say the code is **1234** and do as follows;

- | | | |
|----------|---|--|
| 1 | Turn on/off 1 time
(on-off) | Start with the next number in 3 sec when the diode is blinking fast |
| 2 | Turn on/off 2 times
(on-off, on-off) | Start with the next number in 3 sec while the diode is blinking fast |
| 3 | Turn on/off 3 times
(on-off, on-off, on-off) | Start with the next number in 3 sec while the diode is blinking fast |
| 4 | Turn on/off 4 times
(on-off, on-off, on-off, on-off) | Start with the next number in 3 sec while the diode is blinking fast |

NOTE! The number 0= turn 10 times

As long as the ignition is in the on mode the alarm is deactivated. This is the same with the push switch.

If you need a new remote control please contact your retailer!

Programming new remote controls

1. Do an emergency launch; the programming of the remote must start in 10 seconds while the diode is shining firmly.
2. Push one or two times on the remotes deactivation button. The diode goes off when the new remote is programmed
3. Program the next remote in 10 seconds after the first one. Remember that all of the remotes you want to program must be done at the same timer after pushing in the pin code. Max 5st.

Good luck and remember to practice so you know what to do in an emergency situation!